

Two Tier Pricing Instructions

- 1 Push yellow service mode button
- 2 Push down arrow key to **PRICE** & push the Execute key to enter PRICE MENU
- 3 Push down arrow key to desired **Product Cashless, Row Cashless** or **Machine Cashless** and push Execute Key
- 4 Respond with desired selection, tray or machine and enter price and Execute key to save.
Normally the cashless price is 10 cents higher to compensate for processing fees. If no credit card system is installed make the Cashless & Cash price the same.
- 5 Follow the same procedure as above for the **Cash** pricing.