

5900 Service and Maintenance operation notes

Similar to original Rowe 5900 board.

Mode:	Display	Active Keys
Service:	Time and day	.25 payout .10 payout .05 payout
Exit with door switch		Mode = enter maintenance mode

Maintenance: "MAINT" 0,3,5,7, 8, reset

0 -Motor "MOTOR"
enter either a selection # or 00 or 99 to run all motors.
Price is displayed during run. Reset or door to exit.

3 -Set price "SET PRICE" \$12.75 = unset price
Enter Selection, reset, or door to exit.
If selection 1 = up price 2 = down price
9 = accept price & next selection.
0 = skip to next selection

5 -Sales meter Sales value
Exit with reset or door close.

7 -Set time "CLOCK" selection # or reset

5 clock set display shows "DAY HRMINA/P"
1 day up 2 hr up 3 min up 4 AM/PM
5 6 hr dn 7 min dn
9 accept

6 lockout

8-Gum Row "GUM ROW x" (for Tru-vend optics system)
1 toggle shelf 8 or 9
9 Accept 0 Reset